

# Eternal Lighting

User Manual



**XT-Mitter Pro™**

# XT-Mitter Pro™

## Features & Technical Specifications:

- Operates on 2.4Ghz Frequency
- Digital Display
- Wireless DMX system with 512 channels and up to 7 groups
- Super Slim Design
- Line of sight operation 700+ Feet
- One transmitter can communicate with multiple receivers
- Programming via easy to use push button display

## Included:

- 1 XT-Mitter Pro Transmitter
- 1 Power Adapter



# XT-Mitter Pro™

## **Operation:**

LCD Display – Operation Mode (Transmitter (T) or Receiver (R), RF frequency, Transmitting Power Rate, & ID code

PA: (Transmitting Power Rate) – (0) = 2dBm; (1) = 8dBm; (2) = 14dBm; (3) = 20dBm

ID: **ID Code Selector** – (A-F, 0-9) - Red (1), Green (2), Yellow (3), Blue (4), Purple (5), Cyan (6), White (7). Set transmitter ID to same ID code on your light fixtures to ensure correct communication.

To operate the XT-MitterPro, you must connect the XT-MitterPro with a DMX cable to a DMX Controller. You then choose an ID that matches the same ID Code selector as your light fixture.

Please visit our website at [www.EternalLighting.com](http://www.EternalLighting.com) to view our warranty statement. Thank you for your purchase!

**XT-Mitter Pro™**